

ДАНИЯ

 
Книжный шкаф



RU Инструкция по сборке

EN Assembly instruction

FI Koontaohje

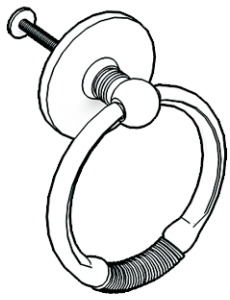

1022
4



1004
18



1038
80



1028
34



1027
34



 
1006
52




1008
4




1040
12

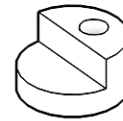


1039
32


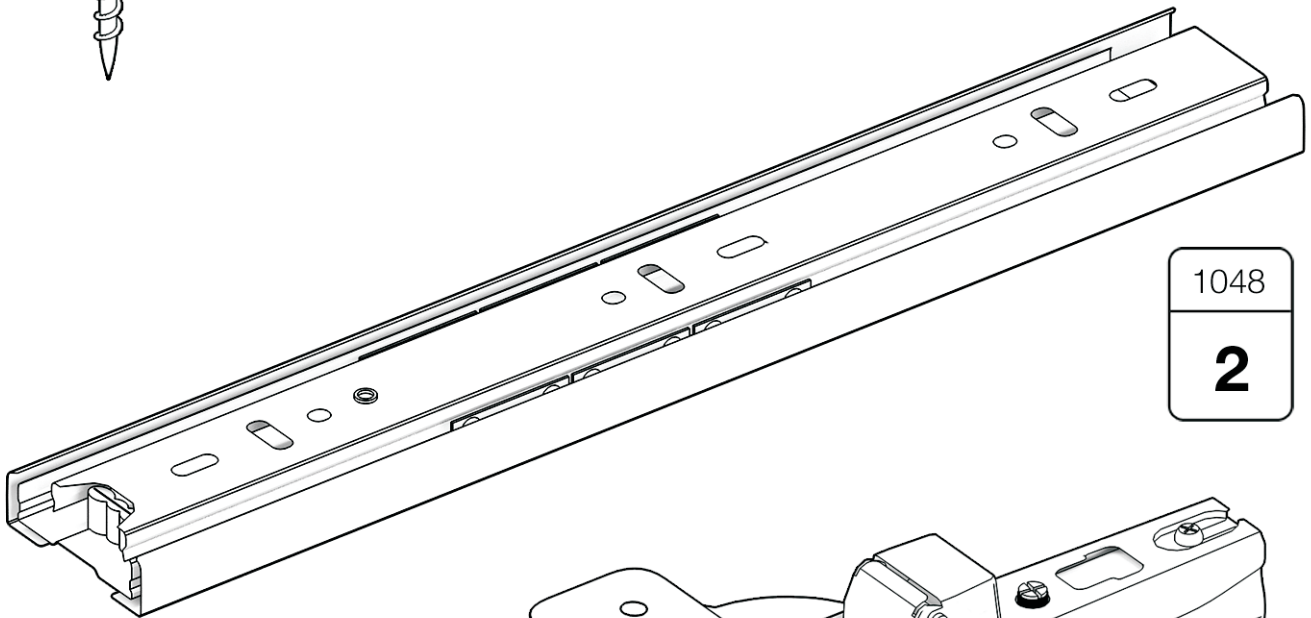 




1048
2

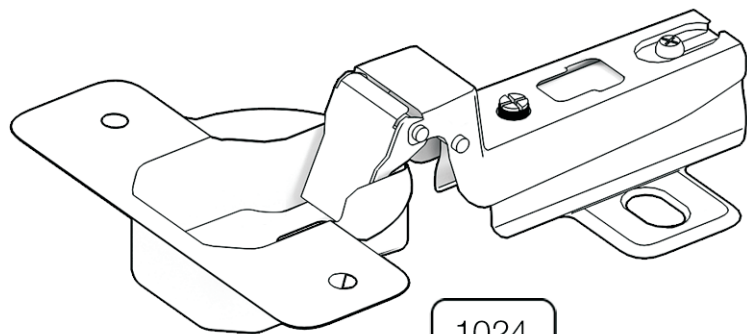 


1024
6

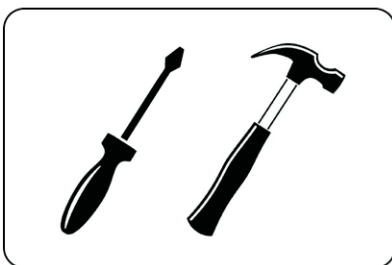 


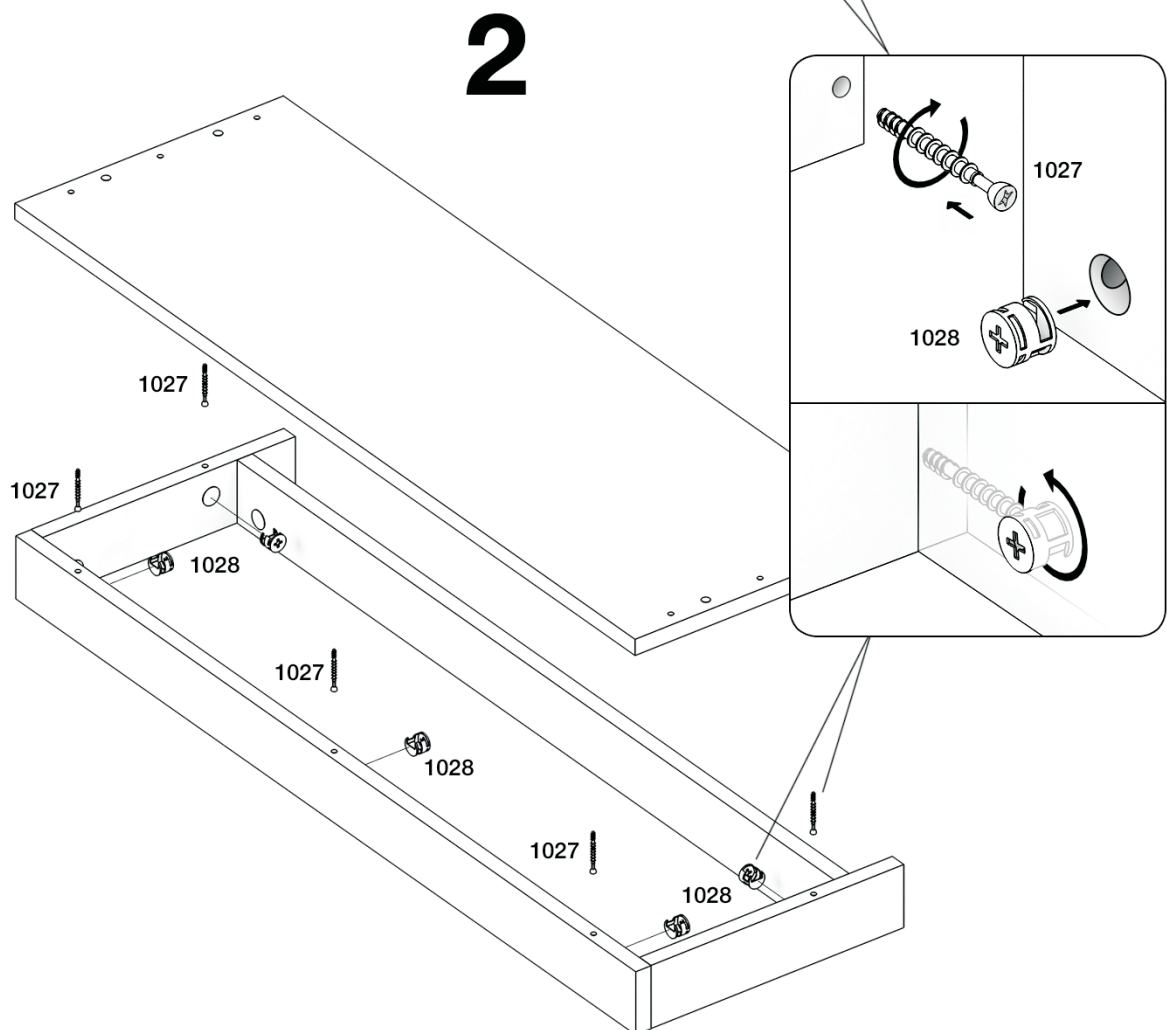 
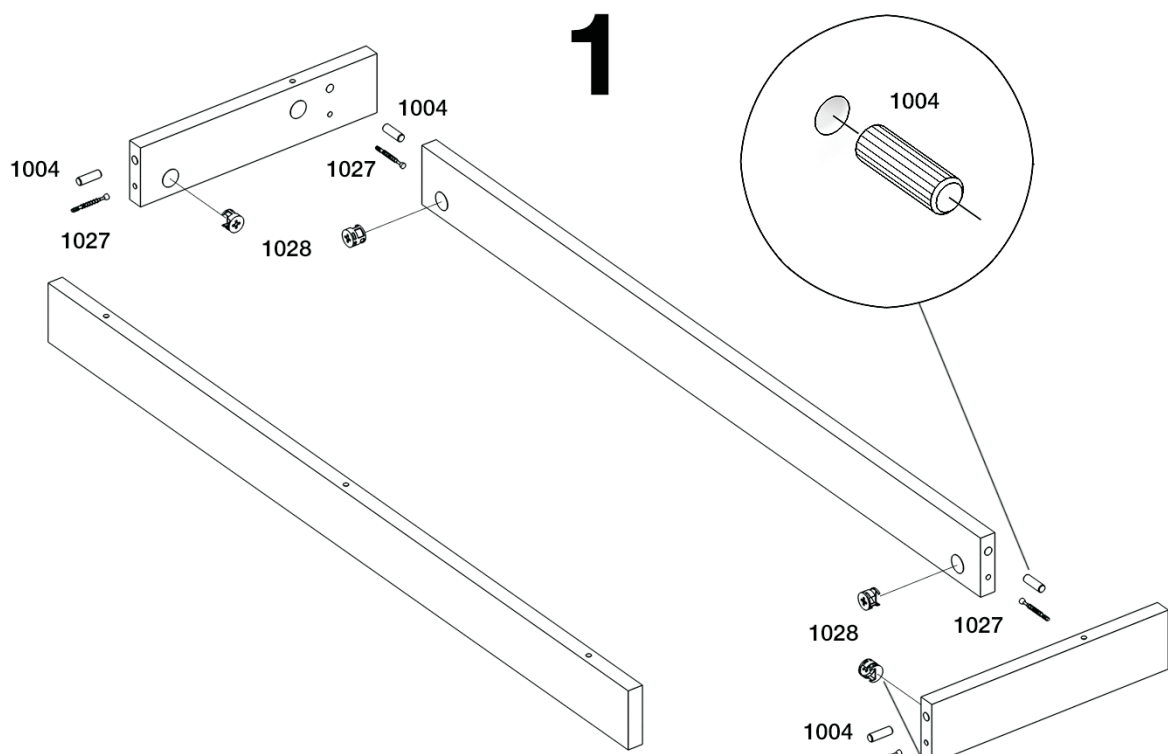 


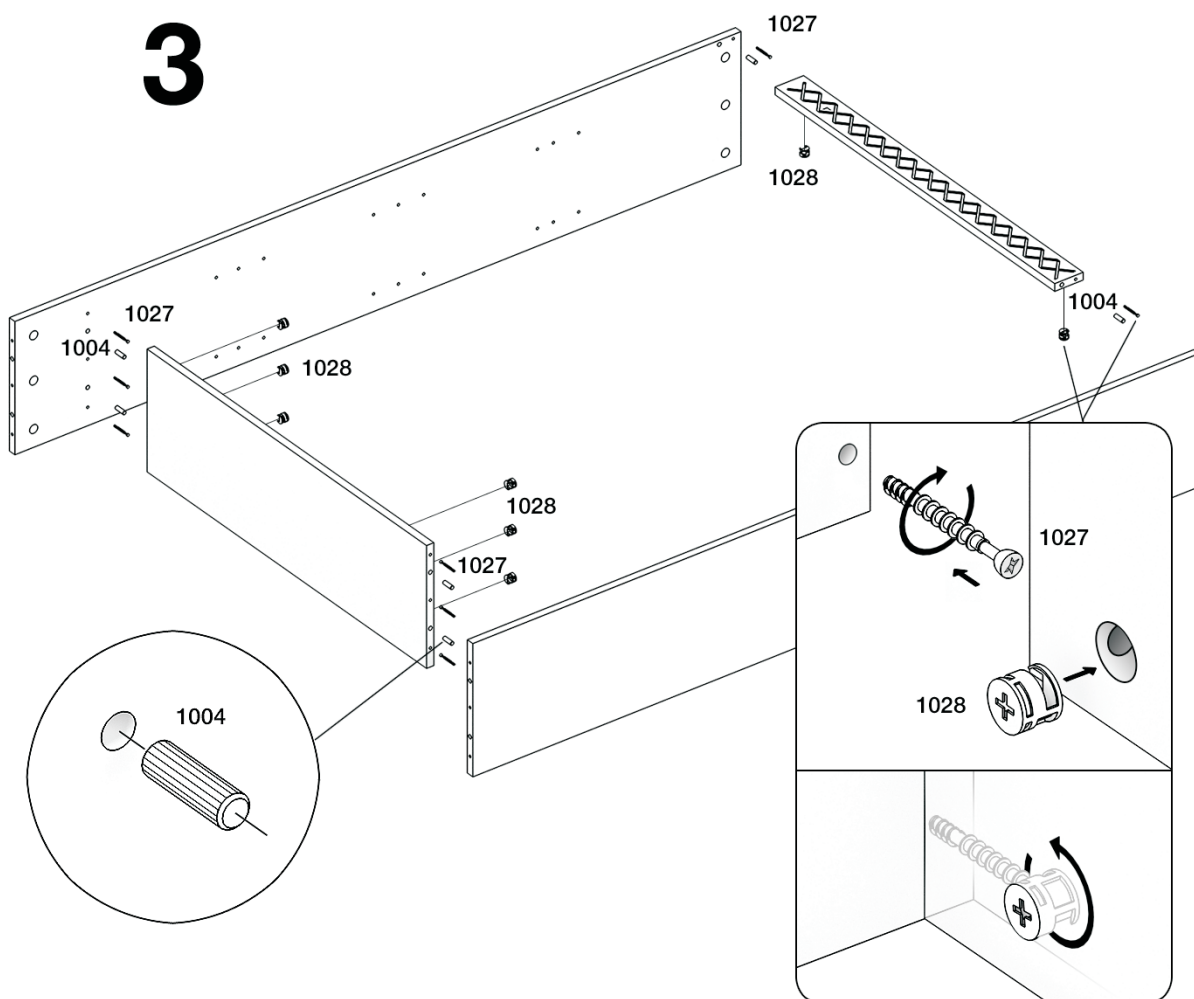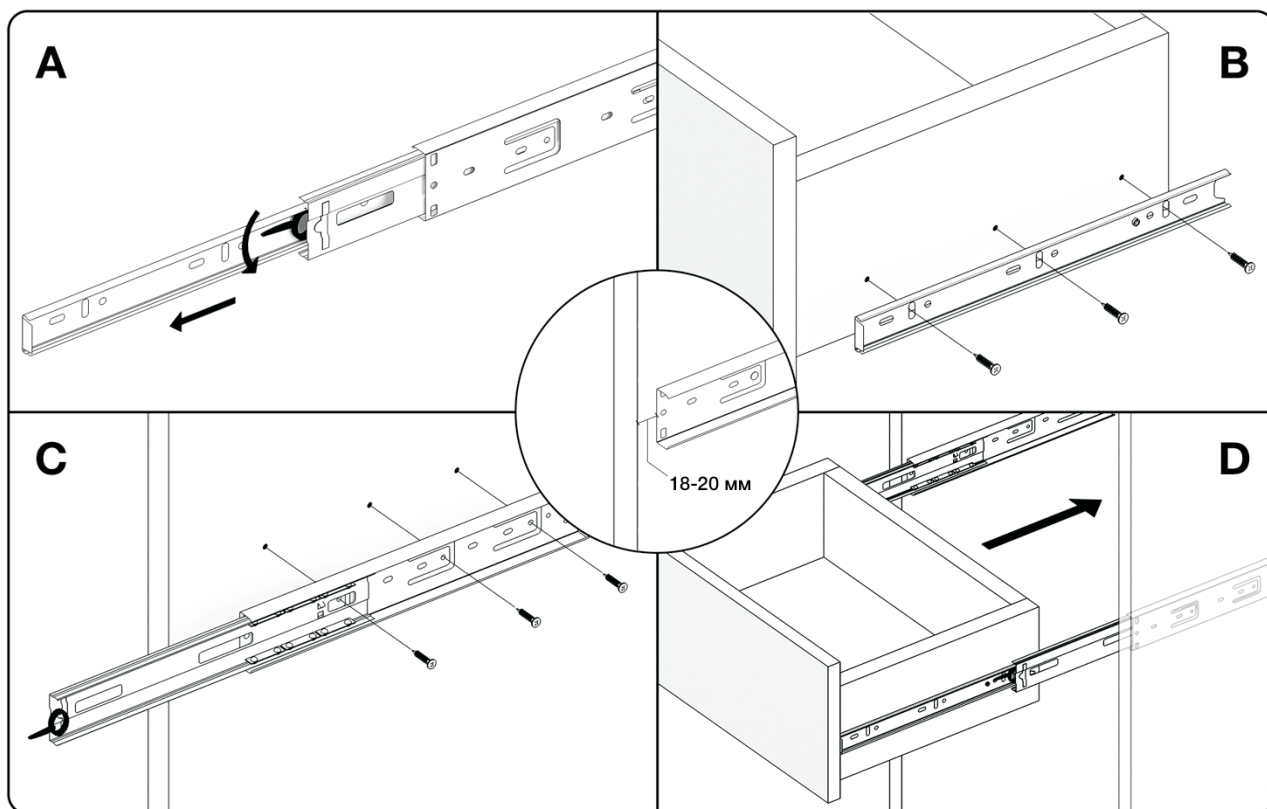  


5

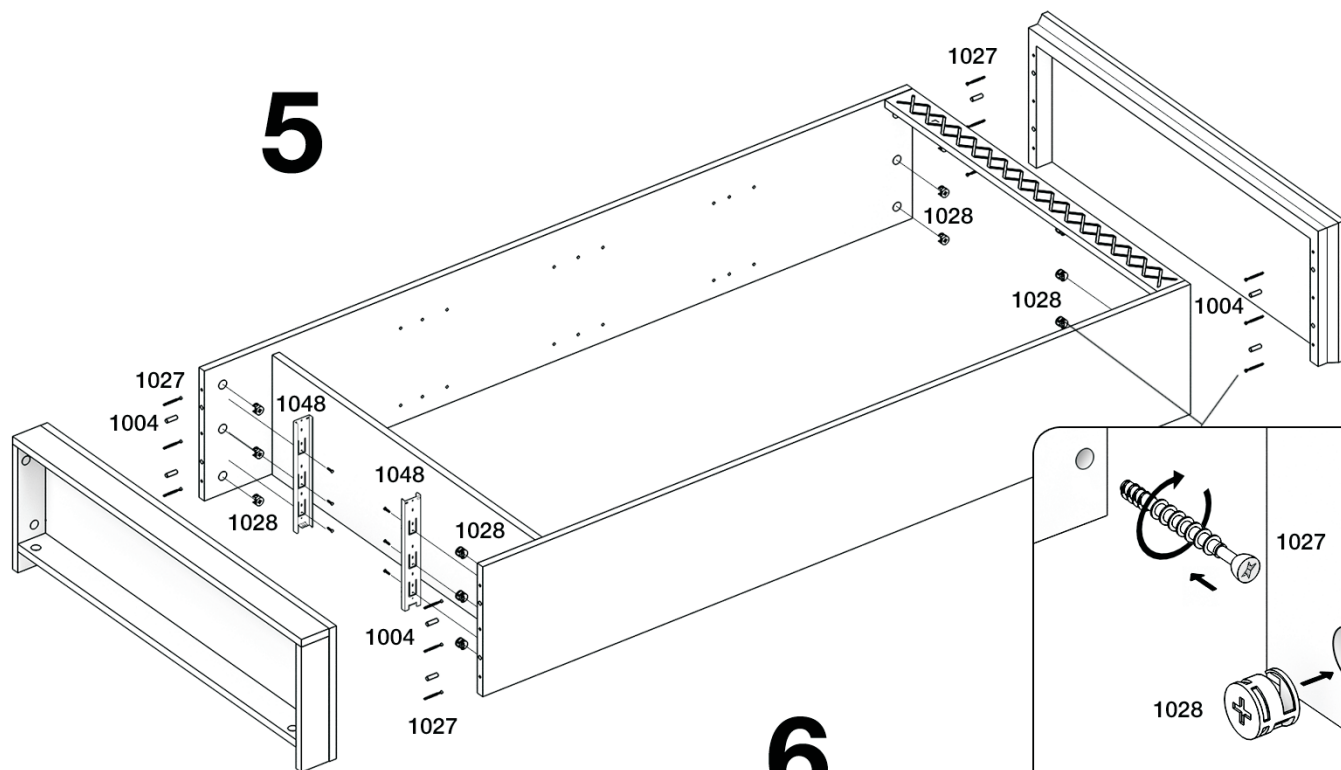 


6

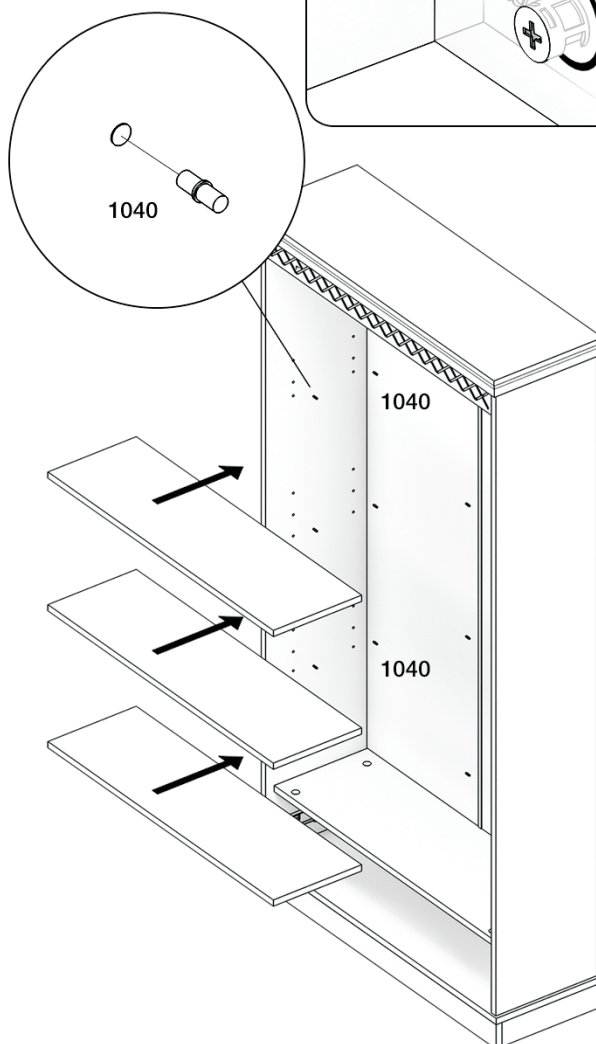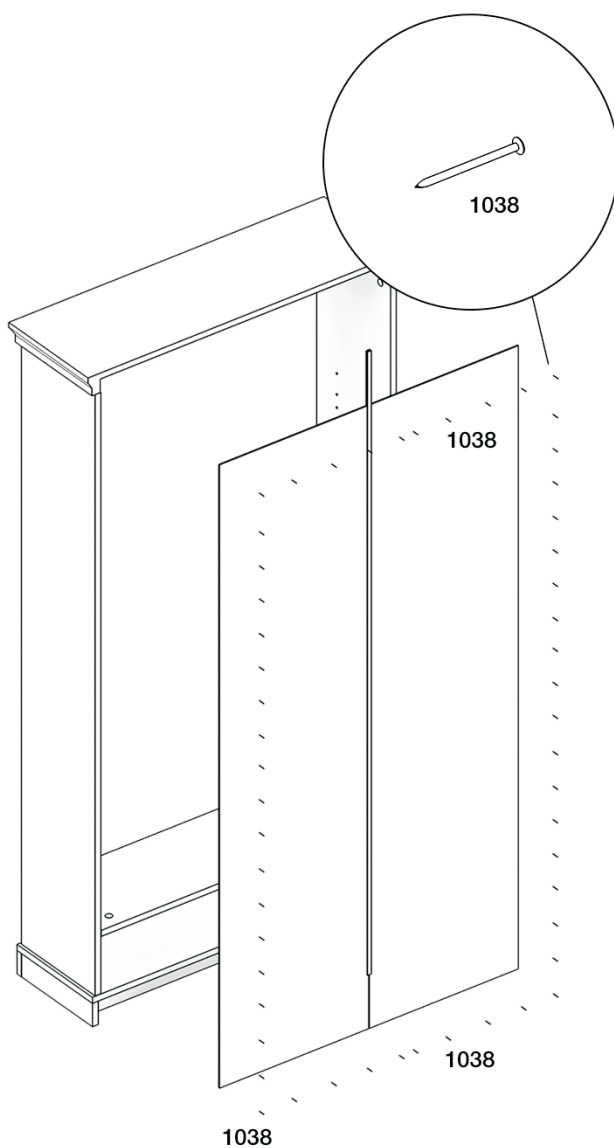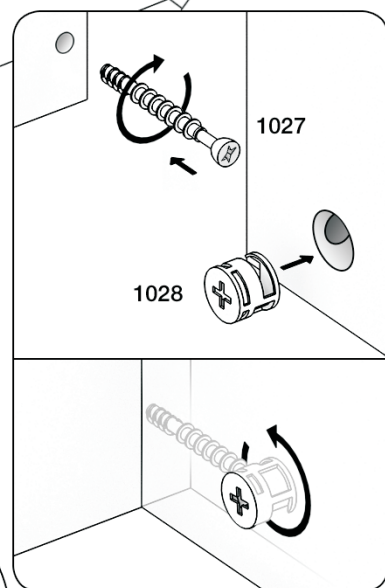   

6

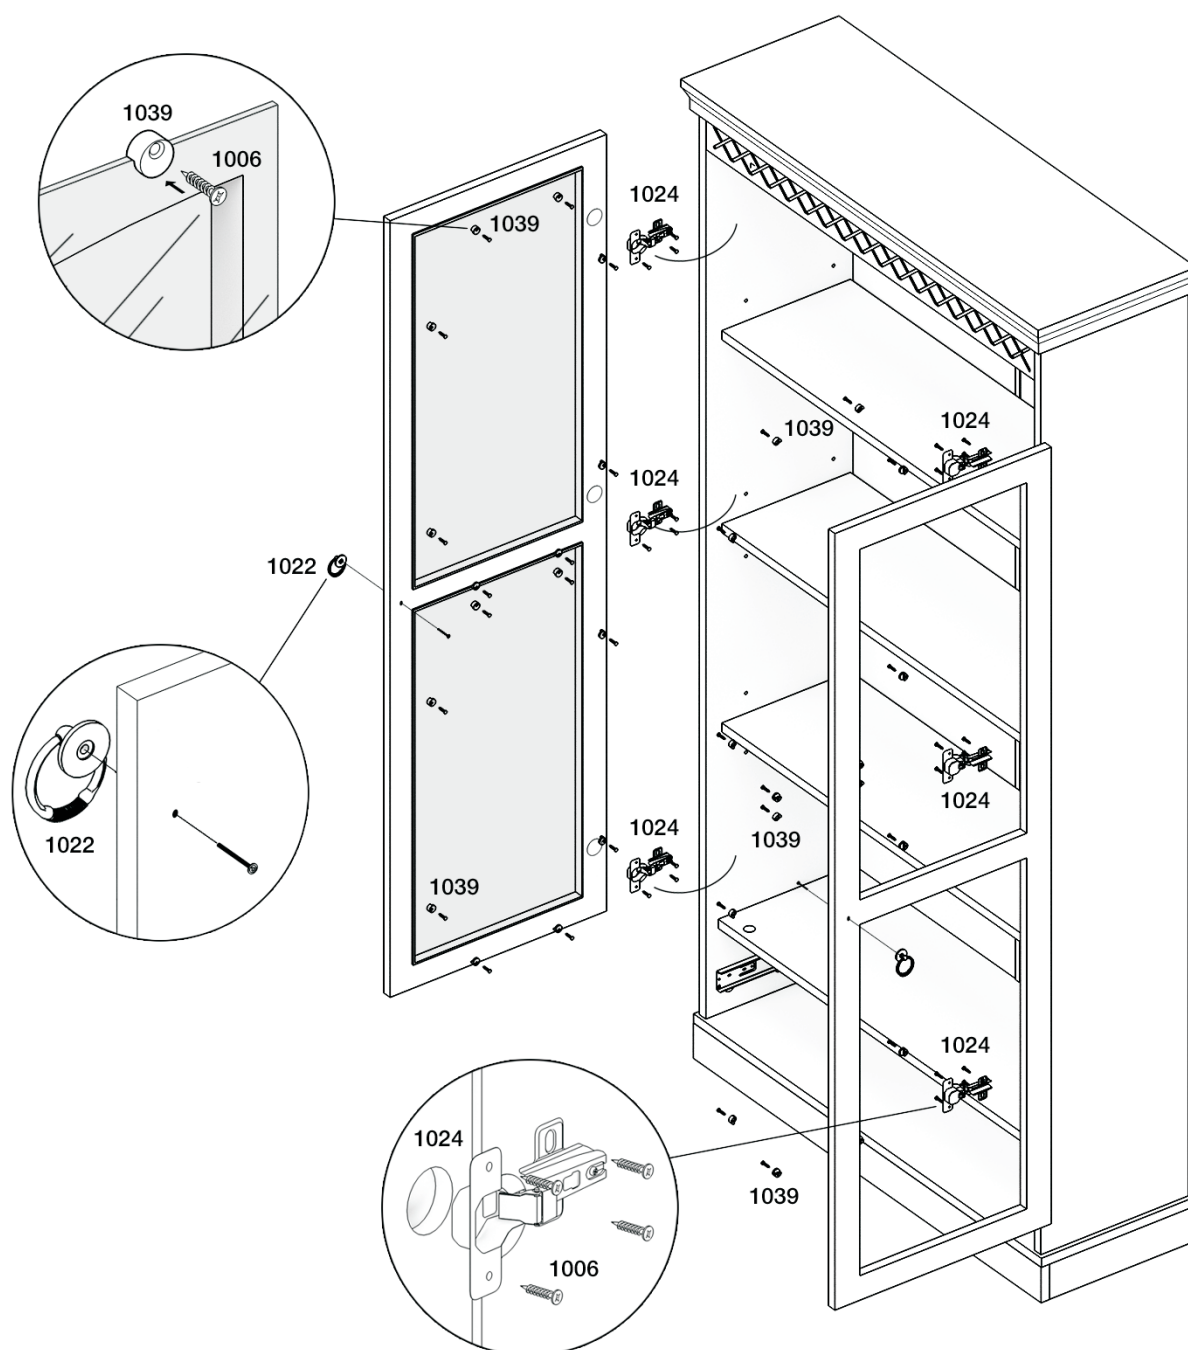 

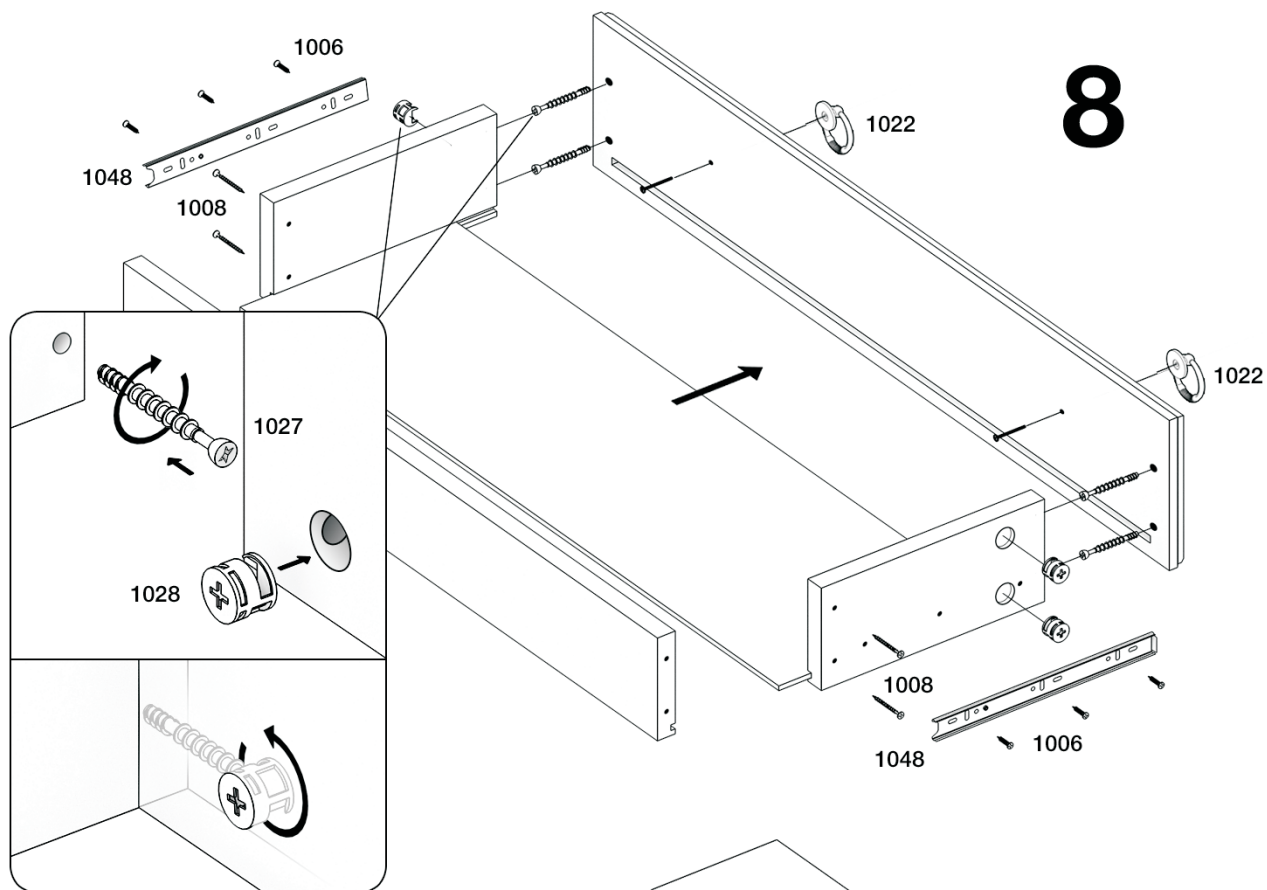 

9

